JENOPTIK

MORE LIGHT

Precise form measurement. Geometrical tolerancing in practice.

Form tolerances according to ISO 1101

Straightness



The tolerance zone is limited by two parallel lines at a distance t apart. Every envelope line of the toleranced cylinder must be between these two parallel lines.

Example



Every envelope line of the toleranced cylinder surface must be between two parallel lines at a distance apart of 0.1.

Roundness



The tolerance zone is limited by two concentric circles at a distance t apart. The circumference line of the toleranced cylinder must be within a circle ring of the zone width t, in every radial section plane.

Example



The circumference line of the toleranced cylinder must be within a circle ring of the zone width 0.1 in every radial section plane.

Flatness



The tolerance zone is limited by two parallel planes at a distance t apart, the dimensions of which correspond to those of the toleranced area. The real workpiece area must be between the two parallel planes at distance t apart.

Example



The real workpiece area must be between two parallel planes at a distance apart of 0.2.

Cylindricity



The tolerance zone for the cylinder envelope area limits the deviation of the roundness, the straightness of the envelope line and the parallelism of the envelope line to the cylinder axis. It is formed by two coaxial cylinders with the radial distance t.

Example



The toleranced cylindrical area must be between two coaxial cylinders with a radial distance of 0.1.

Position tolerances according to ISO 1101

Parallelism



The tolerance zone within which the envelope lines of the toleranced cylinder must lie is limited by two parallel lines at a distance t apart which run parallel to the datum plane.

Example



Every single envelope line of the toleranced area must be between two parallel lines that are at a distance of 0.1 apart, and are parallel to the center axis.

Perpendicularity



The tolerance zone is limited by two parallel planes at a distance t apart, which are perpendicular to the datum axis. The toleranced plane face must be between these two planes.

Example



All points/circle lines of the toleranced area must be between two parallel planes that are at a distance of 0.1 apart, and are perpendicular to the datum plane.

Angularity



The tolerance zone is limited by two parallel planes at a distance t apart at the nominal angle to the datum axis.

Example



All points of the toleranced area must be between two parallel planes that are at a distance apart of 0.1, and are angled at 20° to the datum axis.

Coaxiality



The tolerance zone is limited by a cylinder of diameter t, the axis of which matches the datum axis. The actual axis of the toleranced element must be within the tolerance zone.

Example



The axis of the toleranced cylinder must be within a cylinder that has a diameter of 0.1 and is coaxial to the datum axis A.

Run-out tolerances according to ISO 1101

Radial run-out



In every radial section plane perpendicular to the surface, the tolerance zone is limited by two concentric circles at a distance t apart, the common center point of which is on the datum axis. The radial run-out tolerance applies generally for a full revolution of the toleranced element around the datum axis.

Example



The circumference line of every radial section plane of the toleranced cylindrical area must be between two concentric circles at a distance apart of 0.1 with their common center point on the datum axis A.

Axial run-out



The tolerance zone is limited in every radial distance of two circles at a distance t apart. The circles are in a cylinder, the axis of which matches the datum axis. The diameter of the cylinder can adopt any value of the diameter of the plane face.

Example



Every circle line of the toleranced area must be between two parallel circle planes at a distance apart of 0.1 with their common center point on the datum axis A.

Total radial run-out



The tolerance zone is limited by two coaxial cylinders at a distance t apart, the axes of which match the datum axis. After several rotations around the datum axis and axial shift of the transducer all points of the toleranced element must be within the tolerance zone.

Example



The toleranced cylindrical area must be between two coaxial cylinders with a radial distance apart of 0.1 with their common axis on the datum axis.

Total axial run-out



The tolerance zone is limited by two parallel planes at a distance t apart, which are perpendicular to the datum (rotational) axis. After several rotations around the datum axis and radial shift of the transducer, all points of the surface of the tolerance plane face must be within the tolerance zone.

Example



The toleranced area must be between two parallel circle planes at a distance apart of 0.1 with their common center point on the datum axis A.

Evaluation method

Effect and function of different evaluation methods on the roundness evaluation.

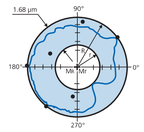

MZCI
Minimum Zone Circle

Concentric inner and outer perimeter circles with a minimum radial distance, and which enclose the roundness profile.

Individual profile peaks influence the center point **considerably.** Gives the least possible form error.

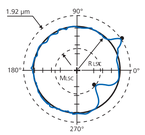

LSCI
Least Square Circle

Circle through the roundness profile with minimum sum of profile deviation squares.

Individual profile peaks influence the center point **only a little.** Very suitable for stable datum formation.

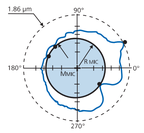

MICI
Maximum Inscribed Circle

Maximum circle inscribed in the roundness profile for inside areas.

The method is used for form measurement of the inside diameter.

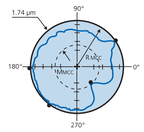

MCCI
Minimum Circumscribed Circle

Minimum circle circumscribing the roundness profile for outside areas.

The method is used for form measurement of the outside diameter.

Filter stages

Filter effect of different cut-off numbers on the roundness result. Gauss filter 50 %.

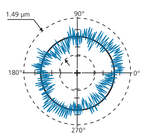

No filter

1.49 µm
RONt (MZCI) = 1.49 µm

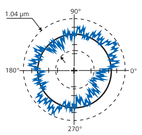

Filter 150 W/R

1.04 µm
RONt (MZCI) = 1.04 µm

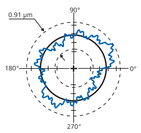

Filter 50 W/R

0.91 µm
RONt (MZCI) = 0.91 µm

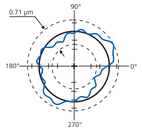

Filter 15 W/R

0.71 µm
RONt (MZCI) = 0.71 µm

General tolerances according to ISO 2768 part 2

Tolerance class H

Nominal dimensional range	…10	> 10 …30	> 30 …100	> 100 …300	> 300 …1000	> 1000 …3000
— ▱	0.02	0.05	0.1	0.2	0.3	0.4
⊥	0.2			0.3	0.4	0.5
⌯	0.5					
⟋	0.1					

For workpieces produced by cutting

All dimensions in mm

Tolerance class K

Nominal dimensional range	…10	> 10 …30	> 30 …100	> 100 …300	> 300 …1000	> 1000 …3000
— ▱	0.05	0.1	0.2	0.4	0.6	0.8
⊥	0.4			0.6	0.8	1.0
⌯	0.6				0.8	1.0
⟋	0.2					

Tolerance class L

Nominal dimensional range	…10	> 10 …30	> 30 …100	> 100 …300	> 300 …1000	> 1000 …3000
— ▱	0.1	0.2	0.4	0.8	1.2	1.6
⊥	0.6			1.0	1.5	2.0
⌯	0.6			1.0	1.5	2.0
⟋	0.5					

○ Tolerance value corresponds to the diameter tolerance or maximum general tolerance for the radial run-out.

// Tolerance value corresponds to the maximum value in comparison of the dimension tolerance of the distance dimension with the general tolerance for the straightness or the flatness of the form elements being inspected.

Standards of practical relevance

ISO 1101	Geometrical Product Specifications (GPS) – Geometrical tolerancing – Tolerances of form, orientation, location and run-out
ISO 12180-1	Geometrical Product Specifications (GPS), Cylindricity – Part 1 Vocabulary and parameters of cylindricity
ISO 12181-1	Geometrical Product Specifications (GPS), Roundness – Part 1 Vocabulary and parameters of roundness
ISO 12780-1	Geometrical Product Specifications (GPS), Straightness – Part 1 Vocabulary and parameters of straightness
ISO 12781-1	Geometrical Product Specifications (GPS), Flatness – Part 1 Vocabulary and parameters of flatness
VDI/VDE 2631 Sheet 1	Form measurement – Basic principals of the determination of form and positional deviations
VDI/VDE 2631 Sheet 2	Form measurement – Determination of the sensitivity of the signal transmittal chain
VDI/VDE 2631 Sheet 3	Form measurement – Filter characteristics and selection

Drawing entries

Tolerance frame

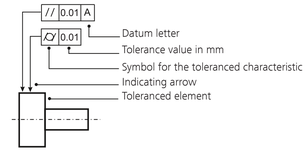

Toleranced elements

Indicating arrow to contour line or subsidiary line (offset from dimension line): if the tolerance refers to the line or area.



Indicating arrow as an extension of the dimension line: if the tolerance applies for the axis or median plane or a point of the element.



Datums

Datum triangle with datum letters

on the contour line of the element or on the subsidiary line:

if the displayed datum is a line or area.



Restriction of the datum to an area of the element as a dot-dash line with dimensioning.



as an extension of the dimension line:

if the datum is the axis, the median plane or an appropriately dimensioned point.



A filled in or empty datum triangle has the same meaning.



1003 7106 2019-05 Copyright © JENOPTIK Industrial Metrology Germany GmbH. All rights reserved. Subject to change without notice.