
# OPERATING INSTRUCTIONS AND SPECIFICATIONS

# NI 9201E/9221E

8-Channel, 12-Bit Analog Input Modules



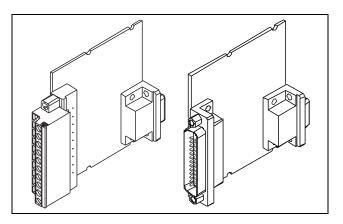

This document describes how to use the National Instruments 9201E and National Instruments 9221E and includes dimensions, terminal assignments, and specifications for the NI 9201E/9221E. In this document, the NI 9201E/9221E with screw terminal and NI 9201E/9221E with DSUB are referred to inclusively as the NI 9201E/9221E. Visit ni.com/info and enter rdsoftwareversion to determine which software you need for the modules you are using. For information about installing, configuring, and programming the system, refer to the system documentation. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.



**Caution** National Instruments makes no electromagnetic compatibility (EMC) or CE marking compliance claims for the NI 9201E/9221E. The end-product supplier is responsible for conformity to any and all compliance requirements.



**Caution** The NI 9201E/9221E must be installed inside a suitable enclosure prior to use. Hazardous voltages may be present.

# NI 9201E/9221E Dimensions

The following figure shows the dimensions of the NI 9201E/9221E.

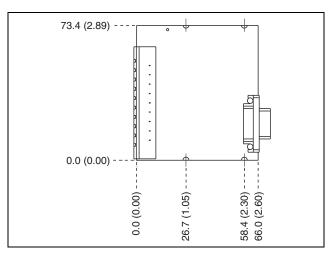


Figure 1. NI 9201E/9221E Dimensions in Millimeters (Inches)

# Connecting the NI 9201E/9221E

The NI 9201E/9221E provides connections for eight analog input channels.

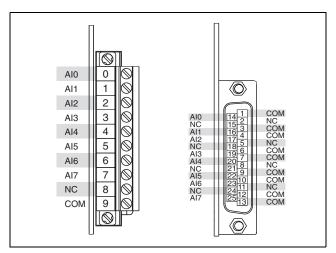


Figure 2. NI 9201E/9221E Terminal and Pin Assignments

The NI 9201E/9221E with screw terminal has a 10-terminal, detachable screw-terminal connector. The NI 9201E/9221E with DSUB has a 25-pin DSUB connector. Each channel has an AI terminal or pin to which you can connect a voltage signal. COM, the common terminal or pin, is internally connected to the isolated ground reference of the module.

The NI 9201E/9221E channels are isolated from other modules in the system. The module protects each channel from overvoltages. Refer to the *Specifications* section for more information about overvoltage protection. The input signals are scanned, buffered, conditioned, and then sampled by a single 12-bit ADC. Refer to Figure 3 for an illustration of the input circuitry on the NI 9201E/9221E.




Figure 3. Input Circuitry on the NI 9201E/9221E

You can connect single-ended voltage signals to the NI 9201E/9221E. Connect the positive lead of the voltage signal to AI. Connect the ground signal to COM. Refer to Figure 4 for an illustration of connecting a single-ended voltage signal to the NI 9201E/9221E.

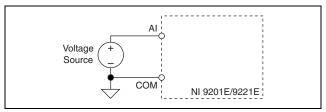


Figure 4. Connecting a Single-Ended Voltage Signal to the NI 9201E/9221E



**Note** You must use 2-wire ferrules to create a secure connection when connecting more than one wire to a single terminal on the NI 9201E/9221E with screw terminal.

# Sleep Mode

This module supports a low-power sleep mode. Support for sleep mode at the system level depends on the chassis that the module is plugged into. Refer to the chassis manual for information about support for sleep mode. If the chassis supports sleep mode, refer to the software help for information about enabling sleep mode. Visit ni.com/info and enter cseriesdoc for information about C Series documentation.

Typically, when a system is in sleep mode, you cannot communicate with the modules. In sleep mode, the system consumes minimal power and may dissipate less heat than it does in normal mode. Refer to the *Specifications* section for more information about power consumption and thermal dissipation.

# **Specifications**

The following specifications are typical for the range -40 to 85 °C internal to any enclosures unless otherwise noted. All voltages are relative to COM unless otherwise noted. The specifications are the same for the NI 9201E and the NI 9221E unless otherwise noted.

# **Input Characteristics**

Number of channels	8 analog input channels
ADC resolution	12 bits
Type of ADC	Successive approximation
	register (SAR)

#### Sample rate (aggregate)

Module	Maximum Sample Rate (R Series Expansion Chassis)	Maximum Sample Rate (All Other Chassis)
NI 9201E, single channel	475 kS/s	800 kS/s
NI 9201E, scanning	475 kS/s	500 kS/s
NI 9221E	475 kS/s	800 kS/s

#### Input range

NI 9201E .....±10 V NI 9221E ....±60 V

#### Operating voltage ranges

	Measurement Voltage, Channel-to-COM		Maximun Channel-to-E or COM-to-E		
Module	Min (V)	Typ (V)	Max (V)	Screw Terminal	DSUB
NI 9201E	±10.3	±10.53	±10.8	$250~V_{rms}$	±60 VDC
NI 9221E	±61.4	±62.50	±63.8		

Overvoltage protection (channel-to-COM) .....±100 V

# NI 9201E accuracy (excludes noise)

Measurement Conditions	Percent of Reading (Gain Error)	Percent of Range* (Offset Error)
Calibrated typ (25 °C, ±5 °C)	±0.04%	±0.07%
Calibrated max (-40 to 85 °C)	±0.25%	±0.25%
Uncalibrated typ (25 °C, ±5 °C)	±0.26%	±0.46%
Uncalibrated max (-40 to 85 °C)	±0.67%	±1.25%
* Range equals 10.53 V		•

#### NI 9221E accuracy (excludes noise)

Measurement Conditions	Percent of Reading (Gain Error)	Percent of Range* (Offset Error)
Calibrated typ (25 °C, ±5 °C)	±0.04%	±0.07%
Calibrated max (-40 to 85 °C)	±0.25%	±0.25%
Uncalibrated typ (25 °C, ±5 °C)	±0.26%	±0.43%
Uncalibrated max (-40 to 85 °C)	±0.67%	±1.06%
* Range equals 62.50 V		•

#### Stability

Gain drift .....±34 ppm/°C

Offset drift

NI 9201E.....±100 μV/°C

NI 9221E.....±580 μV/°C

Input bandwidth (-3 dB)

NI 9201E ......690 kHz min NI 9221E ...... 950 kHz min

Input impedance	
Resistance1	ΜΩ
Capacitance5 J	pF
Input noise (code-centered)	
RMS0.7	7 LSB <sub>rms</sub>
Peak-to-peak5 I	LSB
No missing codes12	2 bits
DNL0	).9 to 1.5 LSB
INL±1	1.5 LSB
Crosstalk (at 10 kHz)7	'5 dB
Settling time (to 1 LSB)	
NI 9201E2 J	μs
NI 9221E1.2	25 μs
	092,512 hours at 25 °C; ellcore Issue 2, Method 1, ase 3, Limited Part Stress

Method



**Note** Contact NI for Bellcore MTBF specifications at other temperatures or for MIL-HDBK-217F specifications.

# **Power Requirements**

# **Physical Characteristics**

Use a dry, low-velocity stream of air to clean the module. If needed, use a soft-bristle brush for cleaning around components.



**Note** For two-dimensional drawings and three-dimensional models of the C Series module and connectors, visit ni.com/dimensions and search by module number.

	12 to 24 AWG copper conductor wire with 10 mm (0.39 in.) of insulation stripped from the end
Torque for screw terminals	0.5 to 0.6 N · m (4.4 to 5.3 lb · in.)
Ferrules	$0.25 \text{ mm}^2 \text{ to } 2.5 \text{ mm}^2$
Weight	
NI 9201E/9221E	
with screw terminal	64 g (2.2 oz)
NI 9201E/9221E with DSUB4	44 g (1.6 oz)

# Safety

# **Safety Voltages**

Connect only voltages that are within the following limits. Channel-to-COM ......±60 VDC max

# NI 9201E/9221E with Screw Terminal Isolation Voltages

Measurement Category II is for measurements performed on circuits directly connected to the electrical distribution system. This category refers to local-level electrical distribution, such as that provided by a standard wall outlet, for example, 115 V for U.S. or 230 V for Europe.



**Caution** Do *not* connect the NI 9201E/9221E with screw terminal to signals or use for measurements within Measurement Categories III or IV.

### NI 9201E/9221E with DSUB Isolation Voltages

Measurement Category I is for measurements performed on circuits not directly connected to the electrical distribution system referred to as *MAINS* voltage. MAINS is a hazardous live electrical supply system that powers equipment. This category is for measurements of voltages from specially protected secondary circuits. Such voltage measurements include signal levels, special equipment, limited-energy parts of equipment, circuits powered by regulated low-voltage sources, and electronics.



**Caution** Do *not* connect the NI 9201E/9221E with DSUB to signals or use for measurements within Measurement Categories II, III, or IV.

### Safety Standards

This product meets the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use when installed in a suitable enclosure:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



**Note** For UL and other safety certifications, refer to the product label or the *Online Product Certification* section.

#### **Online Product Certification**

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/certification, search by module number or product line, and click the appropriate link in the Certification column.

#### **Environmental**

National Instruments C Series modules are intended for indoor use only but may be used outdoors if installed in a suitable enclosure. Refer to the manual for the chassis you are using for more information about meeting these specifications.

Operating temperature (IEC 60068-2-2)	−40 to 85 °C
Storage temperature (IEC 60068-2-1, IEC 60068-2-2)	-40 to 85 °C
Operating humidity (IEC 60068-2-56)	10 to 90% RH, noncondensing
Storage humidity	
(IEC 60068-2-56)	5 to 95% RH, noncondensing
Maximum altitude	2,000 m
Pollution Degree	.2

# **Environmental Management**

National Instruments is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the *NI* and the *Environment* Web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document

### Waste Electrical and Electronic Equipment (WEEE)



**EU Customers** At the end of the life cycle, all products *must* be sent to a WEEE recycling center. For more information about WEEE recycling centers and National Instruments WEEE initiatives, visit ni.com/environment/weee.

#### 电子信息产品污染控制管理办法 (中国 RoHS)



(e) 中国客户 National Instruments 符合中国电子信息 产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息,请登录 ni.com/environment/rohs china。 (For information about China RoHS compliance, go to ni.com/ environment/rohs\_china.)

#### Calibration

You can obtain the calibration certificate and information about calibration services for the NI 9201E/9221E at ni . com/ calibration.

Calibration interval ...... 1 year

# Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at ni.com/support and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0, Belgium 32 (0) 2 757 0020, Brazil 55 11 3262 3599, Canada 800 433 3488, China 86 21 5050 9800, Czech Republic 420 224 235 774, Denmark 45 45 76 26 00, Finland 358 (0) 9 725 72511, France 01 57 66 24 24, Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737, Italy 39 02 41309277, Japan 0120-527196,

Korea 82 02 3451 3400, Lebanon 961 (0) 1 33 28 28, Malaysia 1800 887710, Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466, New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60, Poland 48 22 328 90 10, Portugal 351 210 311 210, Russia 7 495 783 6851, Singapore 1800 226 5886, Slovenia 386 3 425 42 00, South Africa 27 0 11 805 8197, Spain 34 91 640 0085, Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151, Taiwan 886 02 2377 2222, Thailand 662 278 6777, Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the Terms of Use section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: Help-Patents in your software, the patents.txt file on your media, or the National Instruments Patent Notice at ni.com/patents.

© 2009 National Instruments Corp. All rights reserved.