



Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com





Kanomax USA, Inc. 219 Route 206 PO Box 372 Andover, New Jersey 07821 USA (800) 247-8887 Fax: (973) 786-7586 info@kanomax-usa.com Model 6813<sup>™</sup> THERMO-ANEMOMETER

**User Manual** 

www.kanomax-usa.com

Copyright © 2008, Kanomax USA, Inc

6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 24 of 24 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 1 of 24





Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com

### CALIBRATION

To maintain your instrument in top working order, we recommend that you send it back to us for calibration each year, beginning one year after purchase.

Our calibration services include ensuring the instrument performs within its accuracy tolerance, making any necessary adjustments, and inspecting all aspects of the instrument's functionality so that you'll have another year of dependable service. Calibration also includes a complimentary firmware upgrade so that you know you'll have the latest advances in accuracy and reliability in your instrument.

NIST-Traceable multi-point calibration is also available from the factory. We can offer precise calibration tailored to your specific measurement needs using our state-of-the-art facilities and calibration equipment.

Please contact us or visit our website for the latest information on calibrating your instrument.

# **INTRODUCTION**

Congratulations on your purchase of a 6813 Digital Thermo-Anemometer! You now own one of the most accurate, reliable, and highly regarded airflow measurement instruments available today.

Kanomax's model 6813 digital thermo-anemometer is a versatile instrument for measuring air velocity and temperature in various applications such as HVAC, aerospace development, industrial process airflow, and fluids research.

The rugged yet precise probe can be used for airstreams that have a wide range of humidity, temperature and contaminants without compromising accuracy.

Features include custom cable lengths, service temperatures up to  $212^{\circ}F(100^{\circ}C)$  at the probe, high reliability, and long life.

6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 2 of 24 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 23 of 24




### **Exporting and Graphing Data**

Exporting serial port instrument data from the Kanomax Instrument to a spreadsheet application such as Microsoft Excel or OpenOffice Calc allows the data to graphed or recorded.

The simplest way to export the instrument data is to use a terminal emulator program, like Windows HyperTerminal, and either capture the serial data/text to a file (menu selection) or to manually highlight, copy, and then paste the instrument data into an editor such as Windows Notepad.

Once you have the instrument data in a file, save the file as a .CSV type (e.g., InstrumentData.csv).

Open the file in a spreadsheet application such as Microsoft Excel or OpenOffice Calc. A graph of the data as shown below can now be generated.

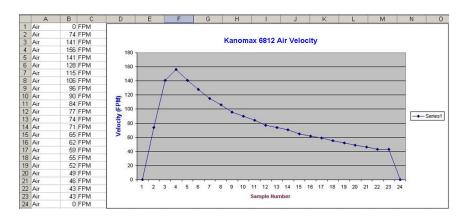

219 Route 206 PO Box 372 Andover, NJ 07821 USA

Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com

### Warranty

This product is fully warranted against defective materials and/or workmanship for a period of one year after purchase, provided it was not improperly used. For your protection, please use this product as soon as possible. If returned, it must be securely wrapped, sent prepaid and insured to:

> Kanomax USA Inc. 219 Route 206 PO Box 372 Andover, New Jersey 07821 USA

Please include a note with name, address, telephone number and description of the problem. Although we provide assistance on Kanomax products both personally and through our literature, it is still the total responsibility of the customer to determine the suitability of the product for use in their application.

This manual is provided by Kanomax Instruments without any kind of warranty. Precautions have been taken in accurately preparing this manual; however, we neither assume responsibility for any omissions or errors that may appear nor assume liability for any damages that result from the use of the products in accordance with the information contained in the manual.

Kanomax USA, Inc www.kanomax-usa.com Page 22 of 24 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 3 of 24



### **SECTION 1 - SPECIFICATIONS**

# Ranges:

| Probe APT275 Airflow  | w:40 to 7800 ft/min(feet per minute)0.2 to 40.00 m/sec(meters per second)         |
|-----------------------|---|
|                       | 300 to 6800 ft/min (1.5 to 35.00 m/sec)<br>100 to 3000 ft/min (0.5 to 15.2 m/sec) |
| Temperature: (using e | ither air velocity probe): -4° to 212°F<br>(-20° to 100°C)                        |

#### Accuracy:

| Air Velocity: | <b>AP275:</b> $\pm$ 1.0% of reading $\pm$ 1 digit            |
|---------------|--|
|               | <b>AP100:</b> ± (0.25% of F.S. + 0.75% of reading + 1 digit) |

#### **Resolution:**

Air Velocity:1 ft/min or 0.01 m/secTemperature:0.1°F or 0.1°C

#### **Operating Temperature:**

| Instrument:   | 32° to 125°F (0° to 50°C)    |
|---------------|------------------------------|
| Air Probes:   | -4° to 212°F (-20° to 100°C) |
| Power Supply. | 3 A A alkaline batteries     |

| Power Supply:  | 5 AA alkaline batteries              |
|----------------|--------------------------------------|
| Battery Life:  | Approx. 150 hours, without backlight |
| Battery check: | Automatic low battery display        |
|                |                                      |

# **Display:** 0.5" LCD, 4 digits, with LED backlight



Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com

Below are examples of the formatted output data for Kanomax's 681x Instruments (units may be different depending on the units selected on the LCD display):

| Model 6812 displaying i<br>Model 6812 displaying i |                        | Air,47,FPM <cr><br/>Air,251,CFM <cr></cr></cr> |
|--|------------------------|--|
| Model 6812:  | Air,47,FPM,Temp,56.7,0 | C <cr></cr>                                    |
| Model 6813:  | Air,47,FPM,Temp,56.7,0 | C,RH,40.5,% <cr></cr>                          |



You will now receive data from your instrument. The graphic below shows the serial port output data from Windows HyperTerminal when connected to a Kanomax Instrument.

| na 者 Kanomax 6812 - Hy   | perTerminal                   |            |        |      |     | -       |  |
|--|-------------------------------|------------|--------|------|-----|---------|--|
| <u>File E</u> dit <u>V</u> iew <u>C</u> all  | <u>T</u> ransfer <u>H</u> elp |            |        |      |     |         |  |
| 02 28 0  | 8                             |            |        |      |     |         |  |
| Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM<br>Air,0,FPM |                               |            |        |      |     |         |  |
| Connected 0:00:28  | Auto detect                   | 9600 8-N-1 | SCROLL | CAPS | NUM | Capture |  |

#### **Serial Port Settings**

| J                      | -    |
|------------------------|------|
| Bits per Second (Baud) | 9600 |
| Data bit               | 8    |
| Parity                 | None |
| Stop bits              | 1    |
| Flow Control           | None |

#### **Serial Port Protocol**

| Data Output Interval | One Second                         |
|----------------------|------------------------------------|
| Data Format          | Comma-Separated Values (CSV)       |
| Measurement Units    | Same as Units shown on LCD Display |



Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com

#### **Options Available:**


- Protective Boot and Splash-Proof Seal for the Instrument
- USB Communications
- RS232 Communications
- Analog 0-5 Volt Output
- Additional Probes, APT275 or APT100
- Extra extension and/or flexible rods
- Custom cable lengths

#### Included:

- (1) 6813 Instrument
- (1) Vane-type probe head with RTD temperature sensor, choice of APT100 or APT275
- (3) Rigid extension rods with handle grip
- (1) Flexible extension rod
- (1) Probe connection cable, 5 ft.
- (3) Size AA 1.5V alkaline batteries
- (1) Hard-shell carrying case with foam liner
- (1) 6813 operation manual

## Dimensions

#### INSTRUMENT

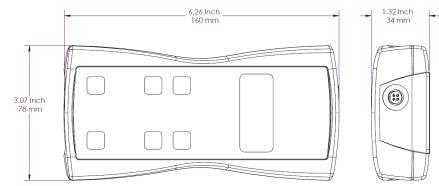

6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc.

Kanomax USA, Inc www.kanomax-usa.com Page 5 of 24

6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 20 of 24





Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com

? ×

+

Cancel

ASCII Setup.

OK

Click on File  $\rightarrow$  Properties. You will see the window shown below. Click on the Settings tab and then click on ASCII Setup... as shown below.

C Windows keys

Kanomax 6812 Properties

Connect To Settings

Terminal keys

Emulation: Auto detect

Telnet terminal ID: ANS Backscroll buffer lines: 500

Backspace key sends-

Input Translation..

Function, arrow, and ctrl keys act as

● <u>C</u>trl+H ● <u>D</u>el ● Ctrl+<u>H</u>, Space, Ctrl+H

Play sound when connecting or disconnecting

ANSI

| APT275 PROBE       | _ Ø2.75 INCH<br>70 MM | MOUNTING BC<br>3/8-16 UNC TA<br>.750 INCH DEE | PPED HOLE              |   |
|--------------------|-----------------------|---|------------------------|---|
|                    |                       | ELECTRICAL<br>CONNECTOR                       |                        |   |
|                    | .875 INCH             |   |                        |   |
|                    | 22 MM                 |   | •                      |   |
| 4.9 INCH<br>124 MM |                       |   | 1.7±.010 INCH<br>43 MM | _ |

0

5.5 inches 140 mm 1.1 inch 28 mm Make sure that "Append line feeds to incoming line ends" is CHECKED as shown below. Click OK.

| ASCII Setup                             |
|---|
| ASCII Sending                           |
| Send line ends with line feeds          |
| Echo typed characters locally           |
| Line delay: 0 milliseconds.             |
| Character delay: 0 milliseconds.        |
|   |
| ASCII Receiving                         |
| Append line feeds to incoming line ends |
| Force incoming data to 7-bit ASCII      |
| ✓ Wrap lines that exceed terminal width |
|   |
| OK Cancel                               |

6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc.

**APT100 PROBE** 

Ø1.0 inch 25 mm

> Kanomax USA, Inc www.kanomax-usa.com Page 6 of 24

3/8-16 TAPPED HOLE 0.75 INCH DEEP

> 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc.

Kanomax USA, Inc www.kanomax-usa.com Page 19 of 24



On the next window, next to "Connect using," select the COM port you that you are using with your instrument. Click OK.

| onnect To               |                          | <u>?</u> × |
|-------------------------|--------------------------|------------|
| Kanoma                  | x 6812                   |            |
|                         |                          |            |
|                         | the phone number that yo |            |
| <u>C</u> ountry/region: | United States of Americ  | a(1) 💌     |
| Ar <u>e</u> a code:     | 603                      |            |
| Phone number:           |                          |            |
| Co <u>n</u> nect using: | COM2                     | •          |
|                         |                          |            |
|                         | OK                       | Cancel     |

In the next window, select the port settings as shown below and click OK. (The Serial Port settings are also listed at the end of this section).

| Bits per second: | 9600      | ~       |
|------------------|-----------|---------|
| Data bits:       | 8         | ~       |
| Parity:          | None      | ~       |
| Stop bits:       | 1         | ~       |
| Flow control:    | None      | *       |
|                  | Restore D | efaults |



Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com

### **SECTION 2 – SWITCH FUNCTIONS**

| KA         |                               |  |  |  |  |
|------------|-------------------------------|--|--|--|--|
|            |                               |  |  |  |  |
| MODE       | MASTER<br>L 6813<br>IEMOMETER |  |  |  |  |
| FPM<br>MPS | MAX                           |  |  |  |  |
| RAMPLE     | HOLD                          |  |  |  |  |
|            |                               |  |  |  |  |
| Ŵ          | $\bigcirc$                    |  |  |  |  |

|--|

Pressing the ON/OFF key switches the instrument ON. Hold down the key for 2 seconds to switch the unit OFF. The unit will automatically power off after 30 minutes without any key presses. To disable auto power-off, hold down the power button during turn-on. The unit will flash AOFF, which means that the auto power-off has been disabled. The auto power-off is re-enabled each time the instrument is turned on.



Press the BACKLIGHT key to turn the LCD backlight on for 30 seconds. To turn the backlight on permanently, hold the backlight key down for 3 seconds. The LCD will flash. The backlight is now switched on permanently. To switch the backlight off, press the backlight key again.

Kanomax USA, Inc www.kanomax-usa.com Page 18 of 24 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 7 of 24



| 219 Route 206         |  |
|-----------------------|--|
| PO Box 372            |  |
| Andover, NJ 07821 USA |  |

Press the TEMPERATURE key to display the current temperature of the air stream as measured by the Air Probe. To switch the units between degrees Fahrenheit (°F) and degrees Celsius (°C), press the TEMPERATURE key again. Either °C or °F will be displayed along with

FPM MPS

the reading.

Press the FPM/MPS key to display the current air velocity as measured by the air probe. To switch the measurement units from FPM (feet per minute, 1 FPM resolution) to MPS (meters per second, 0.01 MPS

resolution), press the FPM/MPS key again. Either **FPM** or **MPS** will be displayed along with the reading.



Press the SAMPLE RATE key to change the measurement averaging rate ("sample rate") of the instrument **for air velocity only.** 

- An average value of airspeed measurements during the preceding 2 seconds is displayed.
- 45EE An average value of airspeed measurements during the preceding 4 seconds is displayed.
- BSEE An average value of airspeed measurements during the preceding 8 seconds is displayed.
- 15 5 An average value of airspeed measurements during the preceding 16 seconds is displayed.

Note: The sample rate for temperature readings is always 2 seconds.

219 Route 206 PO Box 372 Andover, NJ 07821 USA

Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com


### **APPENDIX G – VIEWING AND CAPTURING DATA** (IF EQUIPPED WITH EITHER USB OR RS232 OUTPUTS)

There are many ways to capture the serial port data from the Kanomax Instrument. The simplest method is to use a terminal emulator program.

Using a terminal emulator allows the serial COM port to be opened, with the above port settings, and real-time data to be viewed from the instrument. One such terminal emulator program is Windows HyperTerminal.

To launch Windows HyperTerminal, go to: START  $\rightarrow$  All Programs  $\rightarrow$  Accessories  $\rightarrow$  Communications  $\rightarrow$  HyperTerminal

Enter a name for the Connection, such as "Kanomax 6812 " and choose an icon.

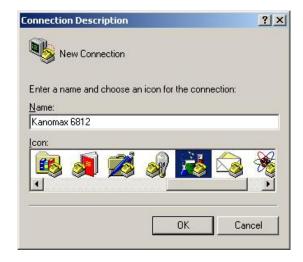

Click OK.

Kanomax USA, Inc www.kanomax-usa.com Page 8 of 24 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 17 of 24



### **APPENDIX F – RS232 COMMUNICATIONS (IF EQUIPPED)**

If the instrument is equipped with the RS232 Communications option, there will be a three pin male connector on the bottom of the instrument. Also, an RS232 cable will be included with the instrument. This cable will have a three pin female connector on one end and a DB9 Female connector on the other end.

#### RS232 Data Output – Instructions for Use

- STEP 1: Connect the RS232 cable (included) to the female connector on the bottom of your instrument. Connect the other end to an RS232 port on your computer.
- STEP 3: Turn the Instrument ON.
- STEP 4: Verify that the Instrument has been set up as a RS232 Serial Port with a unique COM port number. (You only need to do this once). For Windows users, open the Windows Device Manager (found in Control Panel) and verify that a serial port exists.

You are now ready to capture the data being measured by your instrument.

Please refer to Appendix G – Viewing and Capturing Data for further instructions.

KANOMAX 219 Route 206 PO Box 372 Andover, NJ 07821 USA

Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com



Press the MAX/MIN key to record and display the maximum reading for either temperature or air velocity. The maximum reading display will alternate with the letter "H" displayed with the sample rate. Press the MAX/MIN key again to record and hold the minimum reading.

The minimum reading display will alternate with the letter "L" displayed with the sample rate.

тм

For example:

1065 alternating with Hsignifies that 1065 is the highest airspeed reading since the MAX/MIN key was pressed, and the sample rate is set to 8 seconds.

82 alternating with L 15 signifies that 82 is the lowest airspeed reading since the MAX/MIN key was pressed, and the sample rate is set to 16 seconds.

To exit MAX/MIN mode, press the SAMPLE RATE key.



Press the HOLD/RESET key to freeze the current reading on the display. **HOLD** is displayed on the LCD and the reading is held.

Press the HOLD/RESET key a second time to clear this mode and return the unit to normal operation.


Press the HOLD/RESET key while in MIN/MAX mode to display BOTH the minimum and maximum readings since the MAX/MIN key was pressed. Once the HOLD/RESET key is pressed while in MAX/MIN mode, new readings are no longer recorded. To return to MAX/MIN mode, press the HOLD/RESET key again.

Kanomax USA, Inc www.kanomax-usa.com Page 16 of 24


6813<sup>™</sup> User Manual, PN 10283 Rev 2.0. 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 9 of 24



# **APPENDIX A – LCD DISPLAY SYMBOLS**

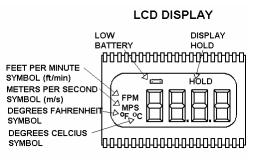

## **APPENDIX B – BATTERY REPLACEMENT**

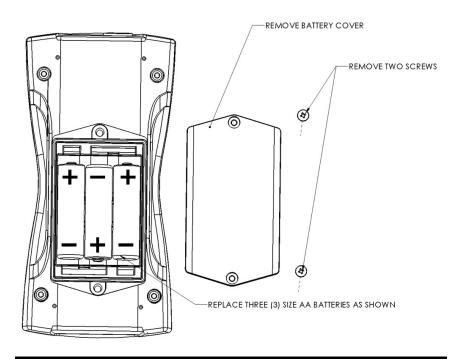

219 Route 206

тм

PO Box 372 Andover, NJ 07821 USA Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com

| 🖳 Device Manager   |   |  |  |  |  |  |  |
|--|---|--|--|--|--|--|--|
| <u>Eile A</u> ction <u>Vi</u> ew <u>H</u> elp  |   |  |  |  |  |  |  |
|  |   |  |  |  |  |  |  |
|  | ^ |  |  |  |  |  |  |
| 🗉 💘 Batteries  |   |  |  |  |  |  |  |
| 🗄 🖳 🚼 Computer   |   |  |  |  |  |  |  |
| 🗈 😋 Disk drives  |   |  |  |  |  |  |  |
| 🗈 👷 Display adapters   |   |  |  |  |  |  |  |
| DVD/CD-ROM drives  |   |  |  |  |  |  |  |
| Floppy disk controllers  |   |  |  |  |  |  |  |
| E ·  IDE ATA/ATAPI controllers<br>■ · ጫ IEEE 1394 Bus host controllers   |   |  |  |  |  |  |  |
| IEEE 1394 Bus host controllers IEEE void and the second |   |  |  |  |  |  |  |
|  |   |  |  |  |  |  |  |
| Mice and other pointing devices     Modems   |   |  |  |  |  |  |  |
|  |   |  |  |  |  |  |  |
|  |   |  |  |  |  |  |  |
| E PCMCIA adapters  |   |  |  |  |  |  |  |
| E Ports (COM & LPT)  |   |  |  |  |  |  |  |
| Communications Port (COM1)   |   |  |  |  |  |  |  |
| ECP Printer Port (LPT1)  |   |  |  |  |  |  |  |
| USB Serial Port (COM7)   |   |  |  |  |  |  |  |
| 🔁 🖔 Processors   |   |  |  |  |  |  |  |
| 😟 🧐 Sound, video and game controllers  | ~ |  |  |  |  |  |  |
|  |   |  |  |  |  |  |  |

You are now ready to capture the data being measured by your instrument.

Please refer to **Appendix G – Viewing and Capturing Data** for further instructions.

6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 10 of 24 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 15 of 24



# **APPENDIX E - USB DATA OUTPUT (IF EQUIPPED)**

If the instrument is equipped with the USB Communications option, there will be a four pin male connector on the bottom of the instrument. Also, a USB cable will be included with the instrument. This cable will have a four pin female connector on one end and a USB Type-A connector on the other end.

#### USB Data Output - Instructions for Use

STEP 1: Install a Virtual COM Port (VCP) Driver on your computer. Free VCP drivers can be downloaded for Windows, Linux, and MAC from FTDI Ltd on their website: http://www.ftdichip.com/Drivers/VCP.htm

We recommend downloading the setup executable, which automatically runs and configures the drivers for you.

- STEP 2: Connect the USB cable (included) to the male connector on the bottom of your instrument. Connect the other end to a USB port on your computer.
- STEP 3: Turn the Instrument ON.
- STEP 4: Verify that the Instrument has been set up as a USB Serial Port with a unique COM port number. (You only need to do this once)


For Windows users, open the Windows Device Manager (found in Control Panel) and verify that a USB serial port exists as shown below. 219 Route 206 PO Box 372 Andover, NJ 07821 USA

Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com

# **APPENDIX C – AIRFLOW VOLUME CALCULATIONS**


To calculate cubic feet per minute (CFM) from a measured air velocity (FPM), you need the calculated cross-sectional area of the air flow stream:

Volume Flow (CFM) = Velocity (FPM) X Area (sq ft). In a rectangular duct this cross sectional area equals the Width times the Height.



W x H=A (cross-sectional area)

In a circular duct this cross section area equals the radius squared times  $\pi$  (3.14).



R x R x 3.14=A (cross-sectional area)

To convert an area calculated in square inches to an area calculated in square feet (which is required for the Volume Flow equation above) divide by 144: (area in sq in.)/144 = (area in sq ft.).

**Example:** The air duct is rectangular, the width is 24 in. and the height is 12 in. The air velocity reading through the duct is 450 FPM. Calculate the Volume Flow.

Step 1: Cross-sectional area = 24 in. x 12 in. = 288 sq in.
Step 2: 288 sq in /144 = 2 sq ft.
Step 3: Volume flow = Air Velocity x Area, therefore, Volume flow rate = 450 FPM x 2 sq ft. = 900 CFM.

Kanomax USA, Inc www.kanomax-usa.com Page 14 of 24 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 11 of 24



# **APPENDIX D – ANALOG OUTPUTS (IF EQUIPPED)**

If the instrument is equipped with the analog output option, there will be a fivepin connector on the bottom of the instrument. Also, an analog output cable will be included with the instrument. This cable will have a five-pin connector on one end and four tinned wires on the other end.

The instrument will output a Voltage between 0 and 5 Volts that corresponds to the Air Velocity and Temperature measured by the instrument. The output range, pin assignments, and wire colors are given in the table below. Also shown is a block diagram of the analog output circuit.

|       |       |              |               | Corresponding   |                                       |
|-------|-------|--------------|---------------|-----------------|---------------------------------------|
| Wire  |       |              | Analog Output | Measurement     | Equation* to convert from             |
| Color | Pin # | Function     | Voltage Range | Range           | Volts (V) to Measurement Value        |
| BLK   | 1     | Ground       | N/A           | N/A             | N/A                                   |
| GRN   | 2     | Air Velocity | 0 to 5 Volts  | 0 to 10,000 FPM | Air Velocity = $2000 \times V$        |
| GRY   | 3     | Not Used     | N/A           | N/A             | N/A                                   |
| WHT   | 4     | Temperature  | 0 to 5 Volts  | -20°C to 80°C   | Temperature [°C] = $20 \times V - 20$ |

\*To convert from Volts to Air Velocity in Feet per Minute, multiply by 2000.

- ► For example, an analog output of 2.375 Volts on the green wire means that the instrument is measuring an air velocity of 4750 feet per minute (FPM).
- ► 2.375 Volts × 2000 = 4750 FPM
- \*To convert from Volts to Temperature in degrees Celsius (°C), multiply by 20 and subtract 20.
  - ► For example, an analog output of 3.458 Volts on the white wire means that the instrument is measuring a temperature of 49.16 °C.
  - ► 3.458 Volts × 20 20 = 49.16 °C

219 Route 206 PO Box 372 Andover, NJ 07821 USA


Phone: 1-800-247-8887 Fax: (973) 786-7586 info@kanomax-usa.com


Note: When using analog outputs, there is an additional  $\pm 1\%$  error in the analog output voltage. This is in addition to the normal measurement error.

- ► For example, an air velocity reading of 500 FPM would normally have an accuracy of ±1% of reading ±1 digit (±6 FPM) when the data is viewed on the LCD display.
- ▶ With the additional error associated with the analog output voltage, the effective accuracy of the analog output for this air velocity measurement will be ±2% of reading ±1 digit (±11 FPM).

Custom Analog Voltage Outputs are also available – contact Kanomax for details.

### Analog Output circuit block diagram and connector pin assignment

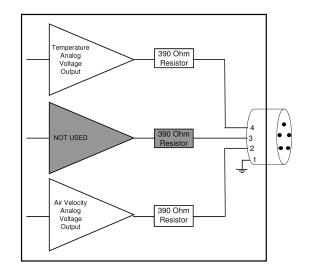

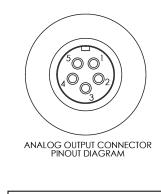

Mating Cable Connector: Binder Part No. 99-0413-00-05

Kanomax USA, Inc www.kanomax-usa.com Page 12 of 24 6813<sup>™</sup> User Manual, PN 10283 Rev 2.0, 24-Nov-2009 Copyright © 2008, Kanomax USA, Inc. Kanomax USA, Inc www.kanomax-usa.com Page 13 of 24