


# SMARTCONTROL | ECS

## Energy Management System

### Input/Output Module for 24 Channels

3-349-552-03  
2/5.19

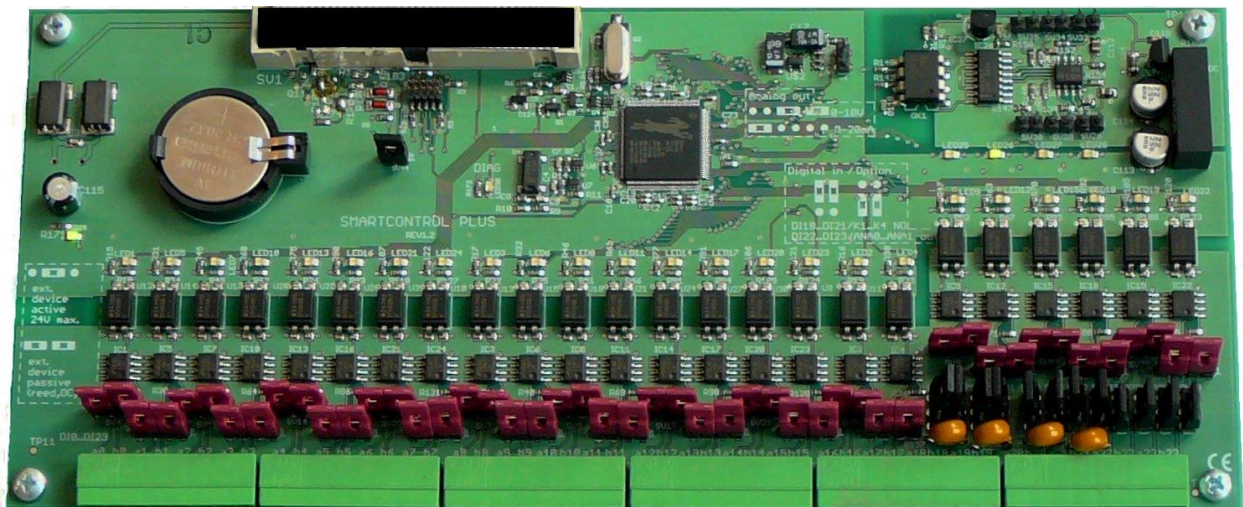


# Table of Contents

|            |   |           |
|------------|---|-----------|
| <b>1.</b>  | <b>Input/Output Module for 24 Channels .....</b>  | <b>3</b>  |
| <b>1.1</b> | <b>Jumper Designations and Functions.....</b>   | <b>4</b>  |
| <b>2.</b>  | <b>Input/Output Module for 24 Channels and SmartControl Manager .....</b>                               | <b>7</b>  |
| <b>2.1</b> | <b>Command Type IO24Analog.....</b>   | <b>8</b>  |
| <b>2.2</b> | <b>Command Type IO24Meter.....</b>  | <b>10</b> |
| <b>2.3</b> | <b>Command Type IO24Relay .....</b>   | <b>10</b> |
| <b>2.4</b> | <b>Command Type IO24Status.....</b>   | <b>11</b> |
| <b>2.5</b> | <b>Backup Battery .....</b>   | <b>13</b> |
| <b>3.</b>  | <b>Characteristic Values .....</b>  | <b>14</b> |
| <b>4.</b>  | <b>Repair and Replacement Parts Service, Calibration Center and Rental<br/>Instrument Service .....</b> | <b>16</b> |
| <b>5</b>   | <b>Product Support Industry.....</b>  | <b>16</b> |

# 1. Input/Output Module for 24 Channels

The I/O module for 24 channels expands the SmartControl with 24 additional digital inputs (DI0 through DI23).


Furthermore, ports DI18 through DI21 can be configured as switching outputs K1 through K4 by means of jumpers. Ports DI22 and DI23 can be configured as analog outputs with jumpers as well.

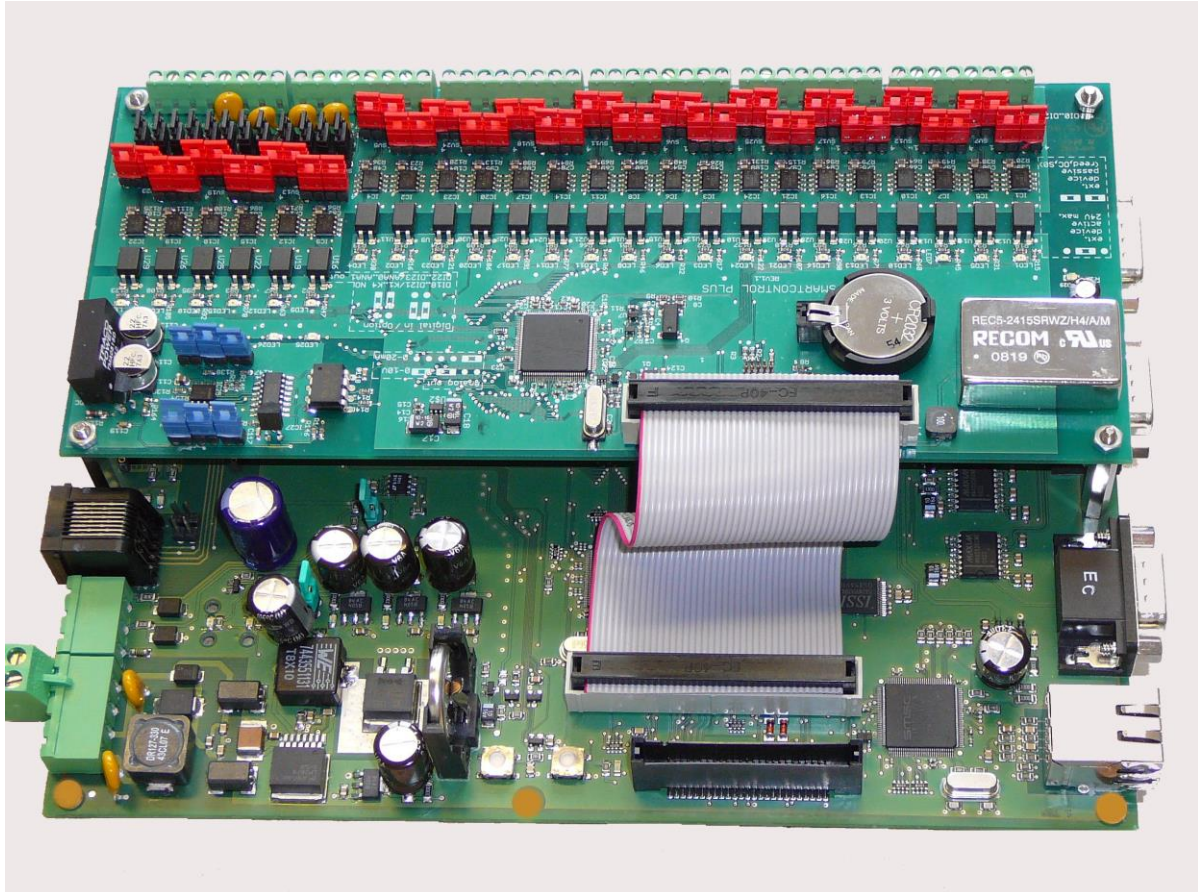

The module is mounted with the help of the included accessories, and is connected to the expansion port at the SmartControl PCB (at the bottom in the picture) with the included cable.

**Please observe all safety precautions for assembly and the connection of ports included in the SmartControl user's manual.**

# 1.1 Jumper Designations and Functions

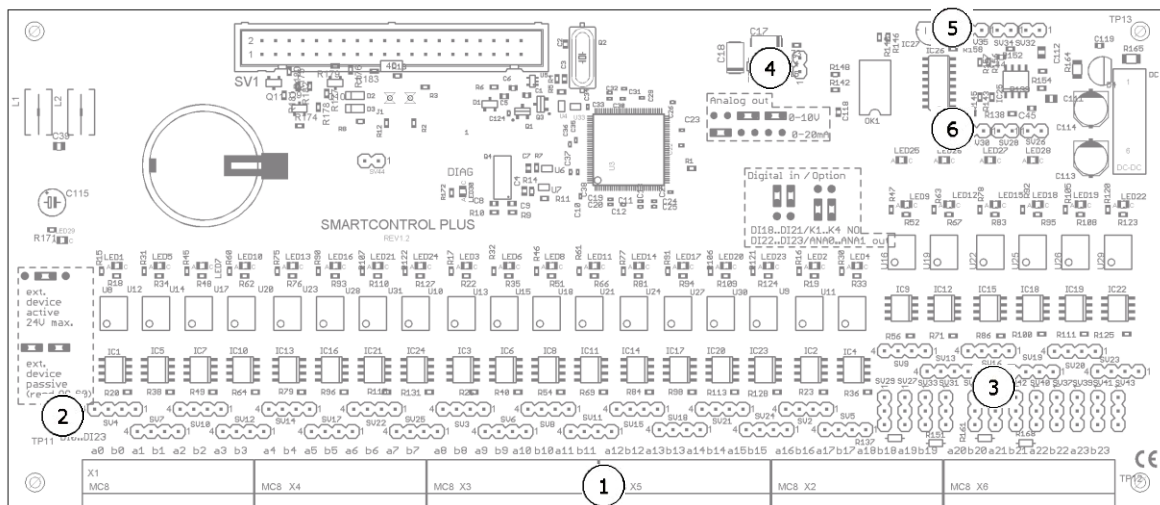

- ① The terminals for ports DI0 through DI23 are designated a and b. The terminals for the digital inputs, for example DI0, are designated a0 and b0.
- ② Jumpers for the active or passive digital input mode: If the ports are used as digital inputs, either sensors with their own power supply or, e.g., floating contacts/reed contacts can be connected. For a more detailed description of this function please refer to the "Digital Inputs" section in the SmartControl user's manual. However, the digital input tariff and synchronization functions described in the user's manual are not available in this case.


Digital in / option:

- ③ Jumpers for selecting options for the last six digital inputs (DI18 through DI23).


Ports DI18 through DI21 can be configured as switching outputs K1 through K4. For example, SV27/SV29 plugged onto 2-3, respectively, configures DI18 as floating NO contact K1. For a more detailed description of the relays please refer to the "Analog Inputs, Relays" section in the SmartControl user's manual.



The jumpers required for selecting switching outputs K1 through K4 are: SV29/SV27, SV33/SV31, SV38/SV36, SV42/SV40.

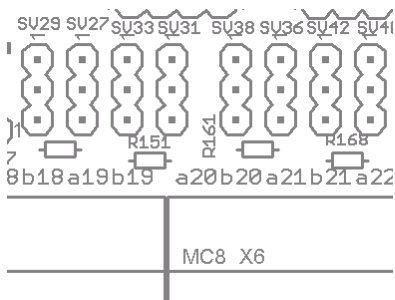

The following are then available at the terminals, for example for DI18 as switching output K1: DI18a and DI18b, the switching function is configured as a normally open contact (NO). Ports DI22 through DI23 can be configured as analog outputs. The jumpers required for selecting analog outputs ANA0 through ANA1 (command address: 0-1) are: SV37/SV39, SV41/SV43.

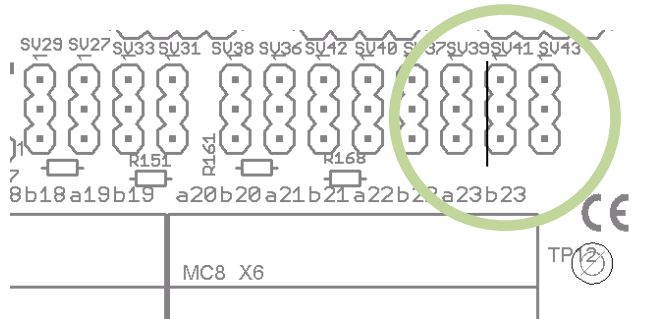

Function selection for the analog outputs:



Required jumpers for ANA0 -> SV30 SV28 SV26



Required jumpers for ANA1 -> SV35 SV34 SV32



Example ANA0 as 0-10V output -> Jumper plugged onto SV28, SV26.

The following are then available at the terminals for DI22:

DI22a analog plus (+)

DI22b analog ground (-)

Example ANA0 as 0-20mA output -> no jumper plugged onto SV30, SV28, SV26

The following are then available at the terminals for DI22:

DI22a analog plus (+)

DI22b analog ground (-)

The following combinations are possible for both analog outputs:

| ANA0   | ANA1   | Use                           |
|--------|--------|-------------------------------|
| 0-10V  | 0-10V  | Common ground                 |
| 0-20mA | -      | Common ground                 |
| -      | 0-20mA | Common ground                 |
| 0-20mA | 0-20mA | Electrical isolation required |
| 0-10V  | 0-20mA | Electrical isolation required |
| 0-20mA | 0-10V  | Electrical isolation required |

Within this context, electrical isolation means, for example, that the ground terminals at ANA0 and ANA1 are neither connected with each other nor with any external ground terminals.

Further components:

Jumper SV44 (always plugged in) disconnects the reset cable from the main PCB. Briefly unplugging the jumper results in a reset.

Jumper SV45 (always open) is used to reinitialize the BBSRAM.

LEDs 1 through 24 (red): indicates pulses at inputs DI0 through DI23.  
LED 30 (green) DIAG, blinks approx. once per second for normal operation.

LEDs 25 through 28 (green): status display for the switching outputs  
LED on = contact closed  
LED off = contact open

SV1 is the interface to the main PCB at the SmartControl (expansion port).

The jumpers for active and passive inputs correspond to those of the SmartControl (refer to the "*Digital Inputs*" section in the SmartControl user's manual).  
The connection terminals for DI0 through DI23 are numbered 49 through 96.



## 2. Input/Output Module for 24 Channels and SmartControl Manager

The input/output module for 24 channels is configured with SmartControl Manager software.

The "IO24Meter" spreadsheet can be accessed under calibration in the SmartControl Manager:


| Input    | Factor      | Unit | Enter meter reading |
|----------|-------------|------|---------------------|
| Input 0  | 1.000000    | kWh  | 0.00                |
| Input 1  | 1.000000    | kWh  | 414.00              |
| Input 2  | 1.000000    | kWh  | 4.00                |
| Input 3  | 1.000000    | kWh  | 8.00                |
| Input 4  | 1.000000    | kWh  | 0.00                |
| Input 5  | 1212.000000 | MJ   | 0.00                |
| Input 6  | 1.000000    | kWh  | 0.00                |
| Input 7  | 1.000000    | 1    | 0.00                |
| Input 8  | 1.000000    | kWh  | 0.00                |
| Input 9  | 1.000000    | kWh  | 0.00                |
| Input 10 | 1.000000    | kWh  | 0.00                |
| Input 11 | 1.000000    | kWh  | 3.00                |
| Input 12 | 1.000000    | kWh  | 10.00               |
| Input 13 | 1.000000    | kWh  | 0.00                |
| Input 14 | 1.000000    | kWh  | 0.00                |
| Input 15 | 1.000000    | kWh  | 35.00               |
| Input 16 | 1.000000    | kWh  | 315.00              |
| Input 17 | 1.000000    | kWh  | 359.00              |
| Input 18 | 1.000000    | kWh  | 0.00                |
| Input 19 | 1.000000    | GJ   | 0.00                |
| Input 20 | 1.000000    | kWh  | 0.00                |
| Input 21 | 1.000000    | kWh  | 0.00                |
| Input 22 | 1.000000    | kWh  | 0.00                |
| Input 23 | 1.000000    | kWh  | 0.00                |

Factor, unit of measure and meter reading can be entered. These entries are written to the SmartControl after clicking the "Accept" button, and all entries can be returned to their default values by clicking the "Reset" button.

Click the current reading for setting the meter readings. Change the reading and acknowledge with enter. Save the changes to the SmartControl with the button "...", which then appears.

The units of measure entered here are used automatically when the meters are read. Units of measure and meter factors can only be changed here.

One of the following IO24 commands can now be entered to a new program in the SmartControl Manager under menu item "programming":



The symbols are located in the middle at the top of the main window. Just click the symbols and drag them to an empty command field. "D/A" means analog, "123" means meter, the third symbol represents a relay, "I/O" means status.

## 2.1 Command Type IO24Analog

The address determines the output channel (ANA0=0 or ANA1=1).

The command variable determines the analog output value. Any desired reference can be used.

Only analog values within the output range are displayed. Larger and smaller values are shortened accordingly.

Example: the command variable has the value 15, whereas the value 10 is shown as analog value.

The value range of the input value can be further adjusted to the output range by adjusting the slope, etc. of the command variable.



IO24Analog - Readout result

Channel

ID: 2

Name: IO24\_Analog\_1

Unit: mA

Readout: 17.09.2009 11:42:11

Status: noError

TestValue: 5

Result:

Start End

By clicking „Test“ a window opens. Upon entering a test value and clicking the “Start” button, the analog output is set to the corresponding value. If no test value is entered, the command variable is used.

## 2.2 Command Type IO24Meter

Attributes

General

Name: IO24\_Counter\_1 ID: 2

Type: IO24Counter Unit: h,m,s

Address: 0

Active  Flash  Display

Memory cycle: Minutes 15, Seconds, Value change 0.000 0...65.000

LCD Position: 1, 2, 3, 4, 5, 6, 7, 8

Start time: 17.09.2009 00:00:00

Measuring cycle: Seconds 0, Milliseconds, Moving average

IO24Counter commands

| Input | Flash                               | Name | Unit |
|-------|-------------------------------------|------|------|
| 19    | <input checked="" type="checkbox"/> | Z_19 | kWh  |
| 20    | <input checked="" type="checkbox"/> | Z_20 | kWh  |
| 21    | <input checked="" type="checkbox"/> | Z_21 | kWh  |
| 22    | <input checked="" type="checkbox"/> | Z_22 | kWh  |
| 23    | <input checked="" type="checkbox"/> | Z_23 | kWh  |

Test OK Cancel Hilfe

The name can be changed in the bottom field in the meter command, and selection can be made as to whether or not writing to flash memory will take place.

Furthermore, it can be specified for each input whether or not this value will be stored to flash memory.

**Attention:** If changes are made here (clear or add meter, or use another input), another ID is assigned to the data as of this point in time which must be given special consideration during read-out because the configuration of the data has been changed!


Further settings, for example unit of measure, can be entered under "Calibration" -> "IO24Meter".

## 2.3 Command Type IO24Relay


Please refer to the "SmartControl Manager, Command Type Relay" section in the user's manual for the SmartControl with regard to this command type.

The functions are the same, only the addresses for DI18 through DI21 in the address field of this command type are 0-3.

## 2.4 Command Type IO24Status

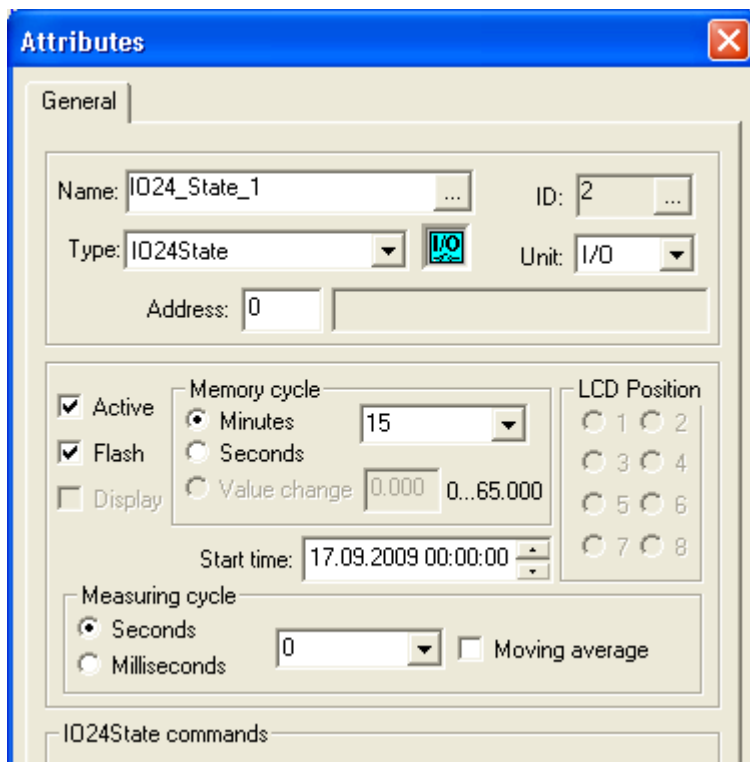

An IO24 status command can be created for recording status changes. The status command queries all digital inputs at the clock-pulse rate of the measuring cycle. The address field has no significance in this case. Status changes are saved at the clock-pulse rate of the **measuring** cycle at most. However, data are always saved at the clock-pulse rate of the **saving** cycle, regardless of whether a status change has taken place or not.

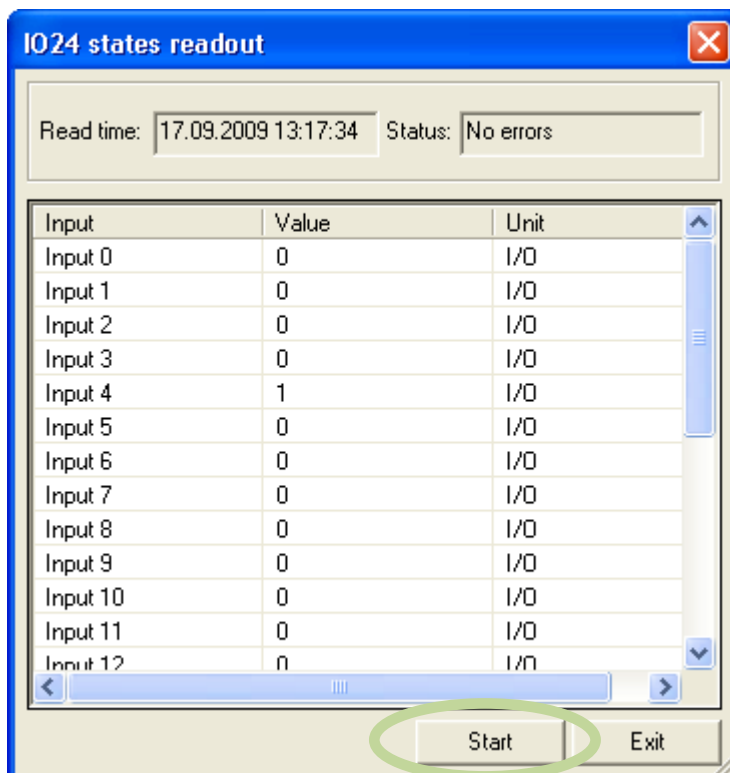

By clicking „Test“ -> „Start“, all digital inputs are queried.

| No. | Name | Netwo... | Status | Entry time          | Value    | Unit |
|-----|------|----------|--------|---------------------|----------|------|
| 1   |      | 10201    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 2   |      | 10202    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 3   |      | 10203    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 4   |      | 10204    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 5   |      | 10205    | 1      | 14.09.2009 01:49:48 | 1.000000 | I/O  |
| 6   |      | 10206    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 7   |      | 10207    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 8   |      | 10208    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 9   |      | 10209    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 10  |      | 10210    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 11  |      | 10211    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 12  |      | 10212    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 13  |      | 10213    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 14  |      | 10214    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 15  |      | 10215    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 16  |      | 10216    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 17  |      | 10217    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 18  |      | 10218    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 19  |      | 10219    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 20  |      | 10220    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 21  |      | 10221    | 1      | 14.09.2009 01:49:48 | 1.000000 | I/O  |
| 22  |      | 10222    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 23  |      | 10223    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |
| 24  |      | 10224    | 1      | 14.09.2009 01:49:48 | 0.000000 | I/O  |

Programming Configuration Calibration Table Graphics Network variables

The digital inputs under the network ID are individually available under menu item „Network Variables“ and can be used for example as reference for system commands.

The „Network Variables“ are automatically created with pre-defined values by the SmartControl under „IO24“ commands. They are automatically assigned a new virtual ID which is calculated as follows::

Virtual ID = 10,000 + ID of the IO24 command x 100 + No. value.

Example for the IO24 status command of digital input 12:

Virtual ID = 10,112 = 10,000 + 1 x 100 + 12

17.09.2009 00:00:00  Only with data **Read** Copy Save Reset

Programm 1

| <input type="checkbox"/> | Date Time           | <input type="checkbox"/> Reference [V] | Date Time           | <input type="checkbox"/> IO24_State_1 [I/O] |
|--------------------------|---------------------|--|---------------------|---|
| 1                        | 17.09.2009 12:35:17 | -0,020080                              | 17.09.2009 12:35:17 | 00001000000000000000000000                  |
| 2                        | 17.09.2009 12:35:38 | -0,020080                              | 17.09.2009 12:35:38 | 00001000000000000000000000                  |
| 3                        | 17.09.2009 12:36:00 | -0,020080                              | 17.09.2009 12:36:00 | 00001000000000000000000000                  |
| 4                        | 17.09.2009 12:37:00 | -0,020080                              | 17.09.2009 12:37:00 | 00001000000000000000000000                  |

Programming Configuration Calibration Table Graphics Network variables

The values which have been saved to memory can be queried under menu item „Table“ -> „Read-in“.

The status of the other inputs is also saved by this command for channel 12.

## **2.5 Backup Battery**

The battery on the PCB is a lithium round cell, type CR2032 3V.

It serves to maintain the meter readings in the event of a power failure.

If the instrument is stored for a lengthy period of time without being used, we recommend replacing the battery every 2 years.

In the case of permanent operation, we recommend replacing the battery every five years.

Please supply the instrument with mains power during battery replacement in order to avoid the loss of data. Please be careful in the process, do not remove any cables and do not connect the two poles of the battery holder with each other.

### 3. Characteristic Values

#### Input/Output Module for 24 Channels

|                     |                     |
|---------------------|---------------------|
| Dimensions (W x H)  | Approx. 216 x 96 mm |
| Power consumption * | Max. 10 W           |

#### Digital Inputs

|                                    |   |
|------------------------------------|---|
| Passive reed contact load capacity | 12 mA / typical input voltage: 12 or 24 V = |
| Active signals                     | Min. 12 mA, max. 24 V                       |
| Edge slope                         | Any   |
| Filter (debouncing)                | Digital (5 ms)                              |
| Pulse sequence                     | At least 10 / 10 ms (0/1)                   |
| Frequency                          | Max. 100 Hz                                 |
| Detection method                   | Interrupt                                   |
| Maximum cable length               | 200 m                                       |
| Storage of meter readings          | Every 15 minutes                            |
| Maximum meter reading              | 9999 9999.9999 99                           |
| Smallest resolution                | 0.000001                                    |
| Optical pulse display              | LED on the PCB                              |

#### Relay Output

|                 |                              |
|-----------------|------------------------------|
| Relay           | 1 NO contact, 1 A            |
| Nominal voltage | 40 V =/~, no inductive loads |

#### Analog Output

|  |   |
|--|---|
| Value range                                  | 0 to 10 V or 0 to 20 mA                                       |
| Max. output current with 0 to 10 V operation | 25 mA   |
| Output voltage with 0 to 20 mA operation     | SmartControl power supply                                     |
| Internal resistance                          | Voltage measurement: 200 kOhm<br>Current measurement: 249 Ohm |
| Accuracy                                     | typical +- 0.05V  |
| Frequency                                    | max. 1Hz  |
| Resolution of AD converter                   | 12 Bit  |

\* Actual power consumption depends upon power pack efficiency, as well as any other connected sensors and devices.

### Additional Documentation / Notes

| Meter | Date/Time | Reading (kW,m <sup>3</sup> ...) |
|-------|-----------|---------------------------------|
|       |           |                                 |
|       |           |                                 |
|       |           |                                 |
|       |           |                                 |
|       |           |                                 |
|       |           |                                 |
|       |           |                                 |
|       |           |                                 |
|       |           |                                 |

### A/D Transformer

| Designation | Unit | Offset | Slope |
|-------------|------|--------|-------|
|             |      |        |       |
|             |      |        |       |
|             |      |        |       |
|             |      |        |       |
|             |      |        |       |
|             |      |        |       |
|             |      |        |       |



## 4. Repair and Replacement Parts Service, Calibration Center and Rental Instrument Service

If required please contact:

GMC-I Service GmbH  
**Service Center**  
Beuthener Str. 41  
90471 Nürnberg, Germany  
Phone: +49 911 817718-0  
Fax: +49 911 817718-253  
e-mail: [service@gossenmetrawatt.com](mailto:service@gossenmetrawatt.com)

This address is only valid in Germany.  
Please contact our representatives or subsidiaries for  
service in other countries.

## 5 Product Support Industry

If required please contact:

GMC-I Messtechnik GmbH  
**Product Support Hotline Industry**  
Phone: +49 911 8602-500  
Fax: +49 911 8602-340  
e-mail: [support.industrie@gossenmetrawatt.com](mailto:support.industrie@gossenmetrawatt.com)

---

Edited in Germany • Subject to change without notice • PDF version available on the Internet